


Matrix Wetroom Panel

INSTALLATION INSTRUCTIONS



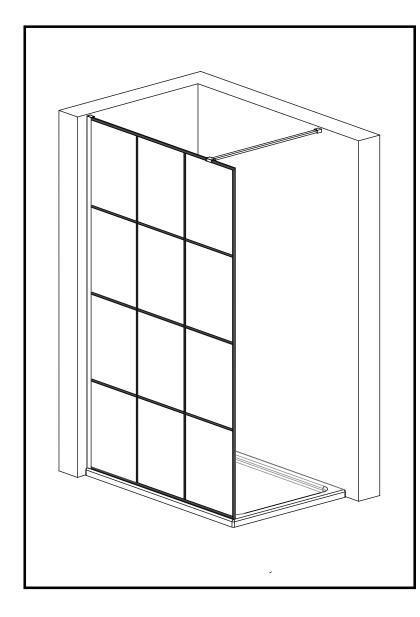

Lifetime Product Guarantee

ATTENTION!

Are you fitting this April enclosure to an April shower tray?

The Lifetime Product Guarantee is only valid when an April enclosure is fitted with an April shower tray and are used and maintained in accordance with the manufacturer's instructions (guarantee excludes seals and magnets).

When April enclosures are used with any other shower tray the guarantee period is limited to 10 years.

Please see our website for full Terms & Conditions.

To activate your Product Guarantee please visit **www.aprilproducts.co.uk** and complete the online form.



IMPORTANT


This product should be installed by a suitably qualified and proficient person. The fitting instructions should be followed carefully to ensure a proper and safe installation. Failure to follow these instructions could result in future injury.

These instructions and list of parts assume that installation is done against solid/tiled walls.

Please check this product for damage prior to starting the installation. No claims can be made after the product has been fitted.

PLEASE NOTE : The minimum and maximum adjustment sizes noted on the product brochures are based on perfectly plumb walls and trays.

COMPONENTS AND BOX CONTENTS

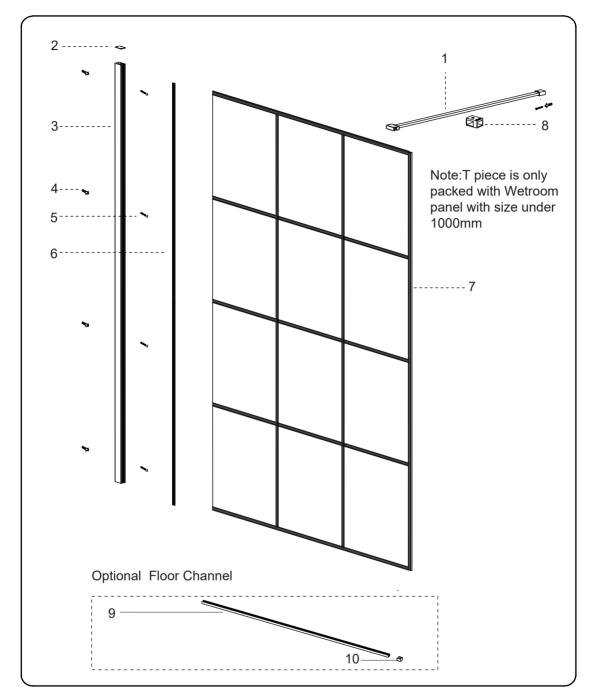


Box Contents

NO.	Description	Qty	NO.	Description	Qty
1	Support Arm	1	6	Vertical Seal	1
2	Wall Profile Top Cap	1	7	Glass Panel	1
3	Wall Profile	1	8	T-Piece	1
4	Wall Plugs	5	9	Floor Channel	1
5	Screw ST4×30	4	10	End Cap	1

FIXING KIT COMPONENTS SITE CONDITIONS

FIXING KIT

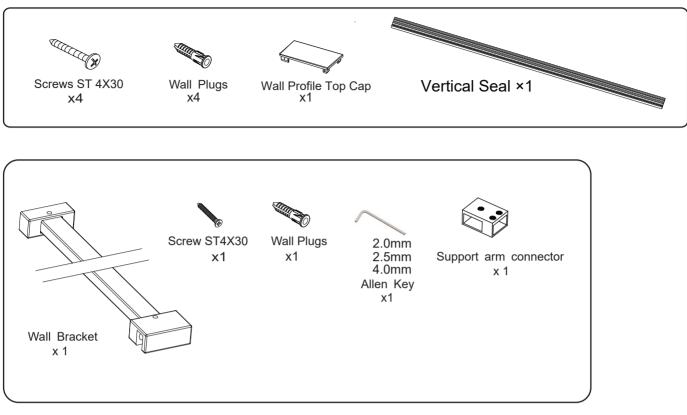


IMPORTANT - Missing Components

Please check this product for missing components prior to installation.

For spare parts visit www.aprilproducts.co.uk

IMPORTANT - Installation site

- 1. Ensure the top surface of the shower tray on which the enclosure will be installed is level in every direction.
- 2. The tiles or other wall finishing should be effectively sealed at tray edges.
- 3. Tiles should extend at least to the corner of the tray and a minimum of 2.0 meters from the top of the tray.

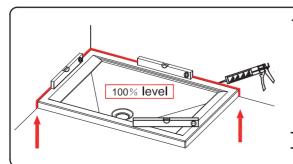


PROCEDURE

TRAY MUST BE 100% LEVEL IN ALL DIRECTIONS

Ensure the shower tray is level in all directions and is properly sealed to the wall. The wall must be tiled down to the top edge of the tray. **Do not angle out bottom tile.**

TRAY MUST BE SEALED FULLY AROUND WHERE THE TRAY MEETS THE WALL.

FIX FRONT PANEL WALL PROFILE

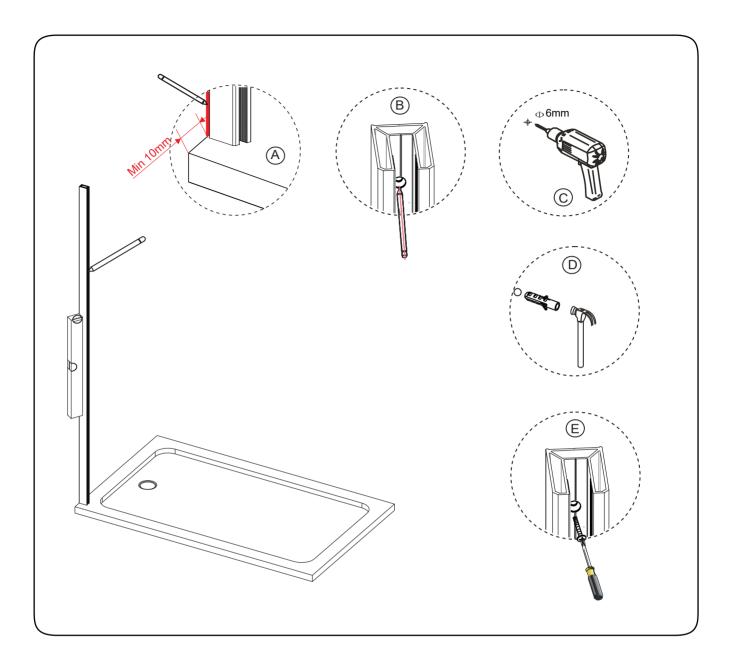

Step 1.

Place the wall profile onto the edge of the tray, roughly 10mm from the front of the shower tray edge. Ensure the wall profile is level to the wall. If the panel is fitted without a tray, please ignore Diagram A.

Step 2.

Mark the position for fixing the wall profile to the wall through the 4 pre-drilled holes in the wall profile (Diagram B).

NOTE: You may find it easier to mark and drill the wall if you apply masking tape to it first.


Step 3.

 $\label{eq:constraint} \mbox{Drill} \mbox{ the wall through the marked points with 6mm masonry drill bit then insert the wall plugs (Diagram C/D) \mbox{ Diagram C/D} \mbox{ the wall plugs} \mbox{ (Diagram C/D)} \mbox{ the wall plugs} \mbox{ the wall plugs} \mbox{ (Diagram C/D)} \mbox{ the wall plugs} \mbox{ the$

Step 4.


Fix the wall profile to the wall with 4 ST 4x 30 screws(Diagram E)

FIX FRONT GLASS PANEL

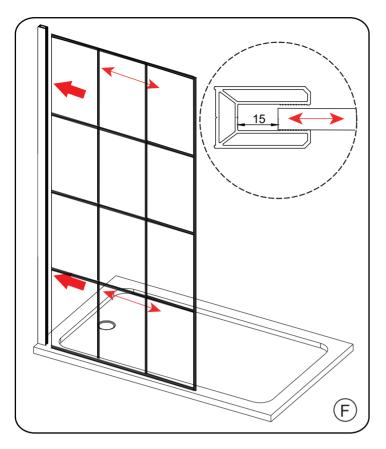


Step 5.

Push the clear edge of the glass panel onto the wall profile. Please note the black printing on the glass must be on the outside.

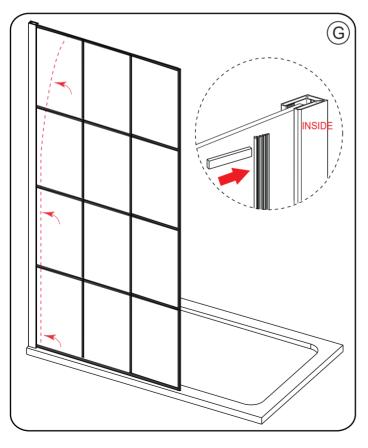




FIX WALL BRACKET

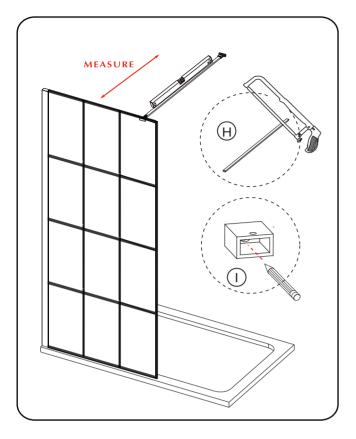

Step 7.

Measure the support bar tube length then cut it to the required size (Diagram H). Step 8.

Fit the support bar onto the glass panel, ensure the support bar is level then mark the wall fixing hole onto the wall (Diagram I).

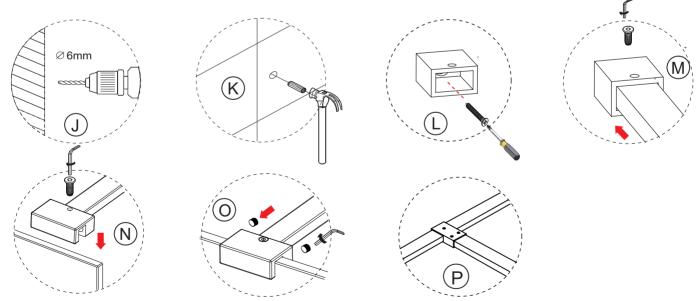

Step 9.


Drill the hole on the wall through the marked point using 6mm masonry drill bit then insert wall plug(Diagram J/K). Step 10.

Secure the wall fixing onto the wall using ST 4 x 30 screw then fix the support bar onto the wall fixing (Diagram L/M). *Note: Insert the T-piece (part 8) onto the support arm bar if the panel will be fitted with an end panel.(Diagram P)*

Step 11.

Secure the glass clamp onto the glass using 2 M8 grub screws (Diagram N/O).

FIX OPTIONAL FLOOR CHANNEL

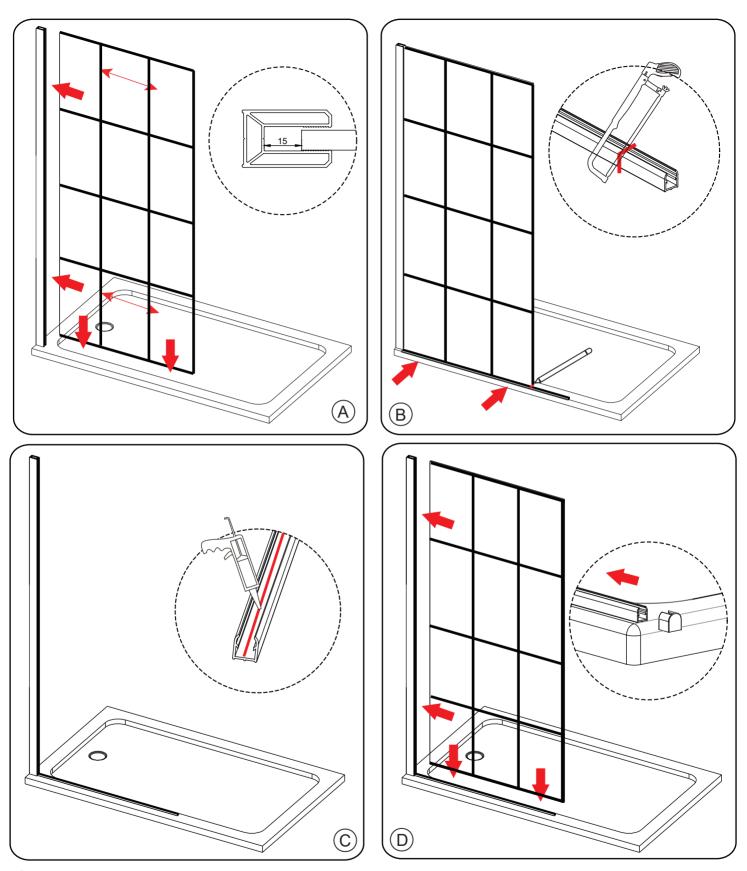

Step 1.

Push the glass panel onto the wall profile (Diagram A).

Step 2.

Put the floor channel onto the tray then mark a line onto the profile, cut the profile through marked line to get required length (Diagram B).


Step 3.

Drop the silicone sealant into the groove of the floor $\mathsf{channel}(\mathsf{Diagram}\,\mathsf{C})$.

Step 4.

Carefully lift the glass panel and insert it onto the floor channel then push it onto the wall profile, once it's in final position fit the end cap onto the floor channel profile(Diagram D).

APPLYING SILICONE SEALANT

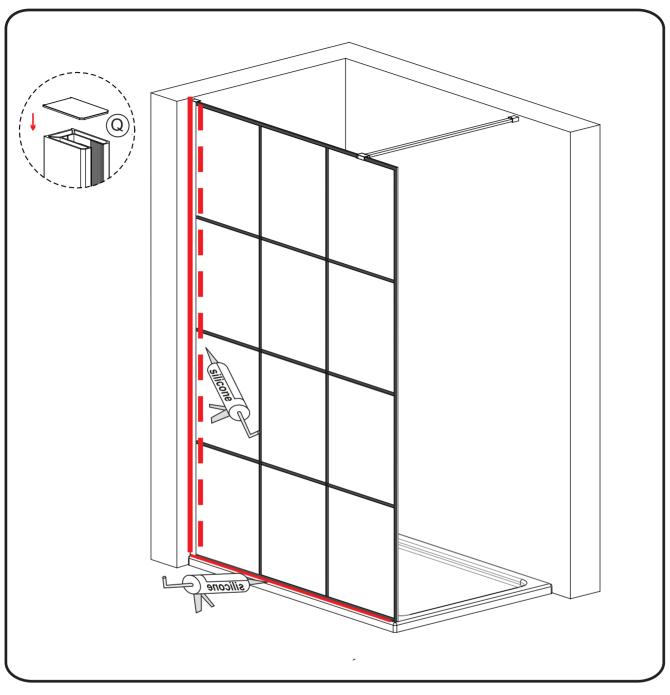

Step 12. Fit the top cap onto the wall profile (Diagram Q)



DO NOT USE THE ENCLOSURE FOR 24 HOURS AFTER SEALING

Applying Silicone Sealant


Sealing Inside

Seal from the top of the wall profile to the bottom on the INSIDE between the wall profile and the wall. IMPORTANT: Do not apply sealant on inside of the tray.


Sealing Outside

Seal from the top of the wall profile to the bottom between the wall profile and tiles on both sides. Also seal along the bottom where the glass meets the tray.

OPTIONAL RETURN PANEL INSTRUCTION

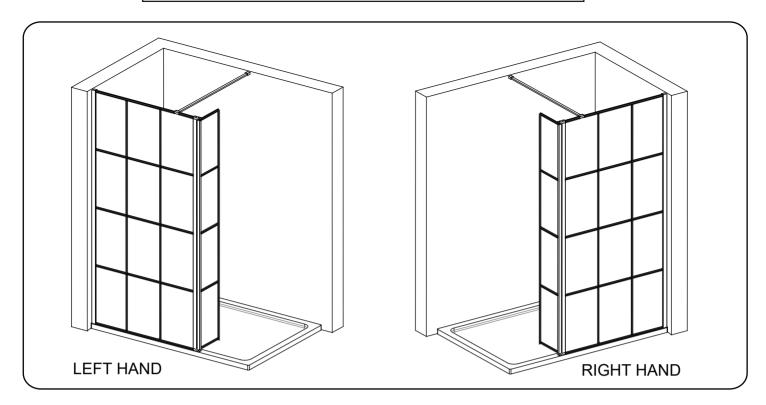


COMPONENTS AND BOX CONTENTS

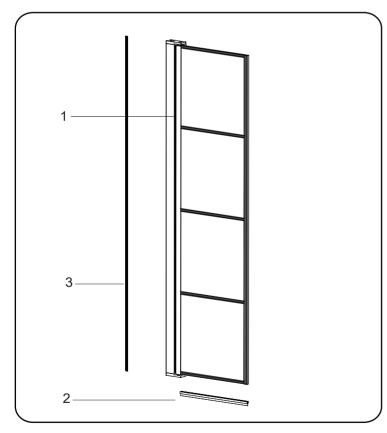


Box Contents

SN	Description	Qty
1	Return Panel	1
2	Bottom Seal	1
3	Vertical Seal	1

FIXING KIT

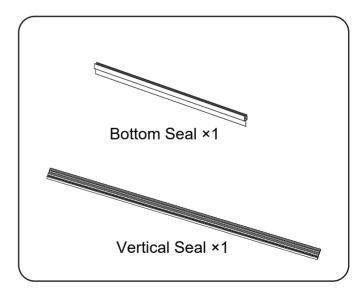

FIX RETURN PANEL

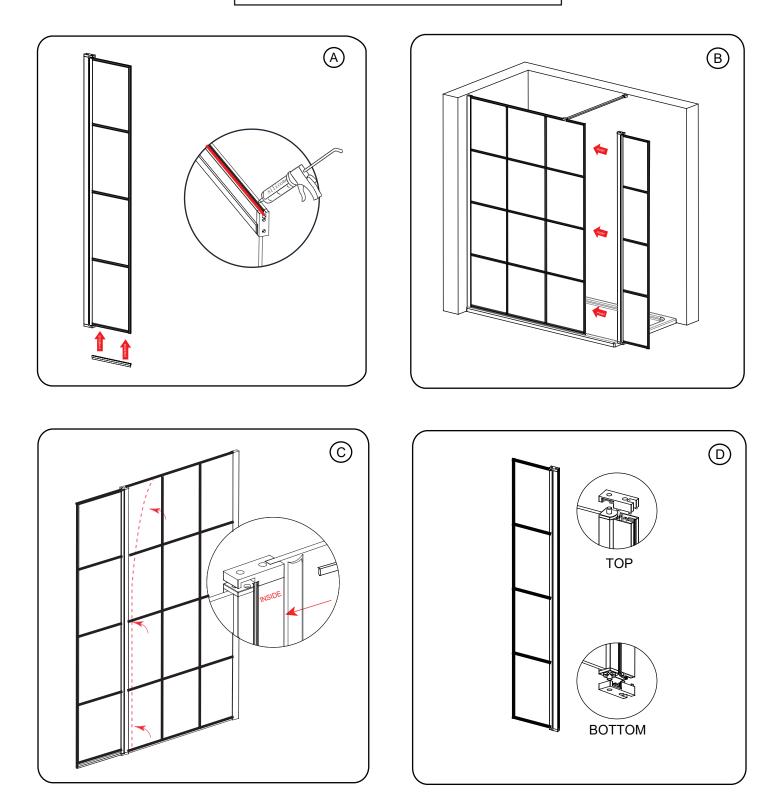

Step 1.

Press the seal onto bottom edge of the return panel glass then insert silicone into the groove of the upright profile(Diagram A). **Step 2.**

2.1 Push the return panel to the Wetroom glass panel, ensure the cut of the hinges placed inside. (Diagram B)

2.2 After the glass panel is in its final position, press the seal into the profile securing from bottom to top (Diagram C).

AFTERCARE

Cleaning Instructions

It is important to clean your April shower enclosure after every use. Please wipe down all glass and metal parts with a clean soft cloth. Ensure that all residual water on the glass is removed after every use.

Usage

For reliable, watertight performance from your April enclosure your shower head should not be positioned so that the shower sprays directly onto the enclosure door. Failure to comply with this may cause the shower to leak. Outward opening doors may cause water to drip onto the floor, please ensure that the floor covering immediately outside the enclosure will not be affected by water.



Clean & Clean Easy Clean Glass Treatment

This product has been treated with Clean & Clear[™] easy clean glass treatment, a protective barrier which creates a 'non-stick' surface on your glass, helping to resist lime scale build up and water spots. For further information on Clean & Clear[™] please visit <u>www.aprilproducts.co.uk</u>

Aftercare

Clean & Clean[™] glass can be cleaned with any suitable nonabrasive glass cleaner - with PH value of between 3-11; the coating will not be damaged. Avoid surfactants and heavily perfumed products. Vinegar and water based products are very effective. Do not use abrasive scrubbing cleaners or equipment for cleaning.

Warranty

Limited 5 year Warranty for Clean & Clear[™] treatment: To guarantee treated surfaces will remain more repellent than untreated glass for 5 years from start of use, as long as basic manufacturer maintenance recommendations are followed and no harsh or abrasive cleaners are used.

